

DC-DC CHARGER

# USER MANUAL



## IMPOTANT SAFETY INSTRUCTIONS !

- Children or adults under the influence of alcohol or drug, or those who lack of experience or professional knowledge are no allowed to use this unit.
- The user must read and understand all of the warning and safety messages supplied with your product prior to installation or use.
- DO not use or store this charger near heat sources such as fire or heaters or expose it to flammable chemicals, vapors or corrosive gases.
- Please only use this product as intended.
- Do not strike, throw the charger.
- Do not mount the product in places where there is a risk of gas explosion.
- Inadequate ventilation may lead to overheat and inefficient charging.
- Please do not expose the charger to moisture or harsh environments.
- This product should be firmly fastened to prevent fall down or tip over.
- Please do not disassemble this charger as such action will not only cause potential damage to you and your unit, but also void the warranty.
- Please note that this DC-DC charger is not waterproof.
- Please disconnect the charger before maintenance or cleaning.
- This DC-DC charger can only be repaired by professional personnel.
- Before charging, please wear proper eye protections.
- Keep fresh water and soap on hand in the event battery acid comes in contact with eyes. If this occurs, cleanse right away with soap and water for a minimum of 15 minutes and seek medical attention.
- Do not smoke or have an open spark or fire near this unit.
- Avoid dropping any metal tool or object on the battery. Doing so could create a spark or short circuit which goes through the battery or another electrical tool that may create an explosion.
- Examine the battery charger regularly for damage. If the battery charger is damaged, it must not be used until it has been repaired.


## KEY FEATURES

This DC-DC charger, which is ideal for 4WDs, caravans, RVs, trucks, campers, trailers, campervans, commercial vehicles and boats, offers an effective way to charge your auxiliary batteries from the alternator or solar panel (up to 40A) to charge AGM, Gel, calcium, LiON batteries. It also has a built-in MPPT regulator to maximize energy absorption, thus reducing the load on your engine. And over-charge, short circuit, over-temperature, thermal load, solar input overload, input/output reverse polarity protection have been integrated to offer an extra layer of protection. Furthermore, the charger allows you to re-select the battery during charging by long pressing "POWER", and LED indicator showing stage of charging. And memory function is integrated to make charging more convenient.

## STAGE OF CHARGING


- |                                 |                                 |
|---------------------------------|---------------------------------|
| (1) Standby                     | (2) Pre-charge                  |
| (3) Constant current charging 1 | (4) Constant current charging 2 |
| (5) Constant voltage charging   | (6) Fully charged               |
| (7) Re-charge                   |                                 |

## PACKING LIST

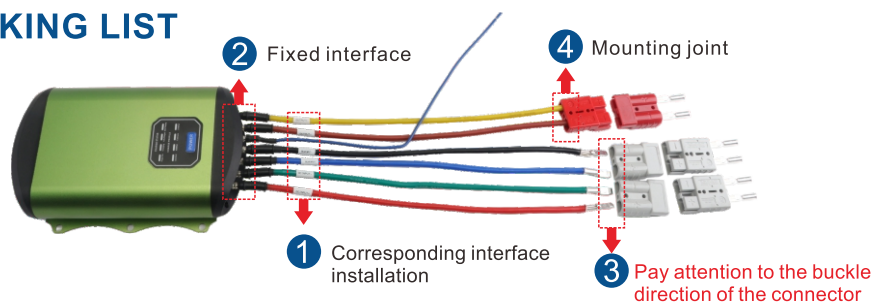

### INSTALLATION SEQUENCE DESCRIPTION

## IDENTIFICATION OF PARTS

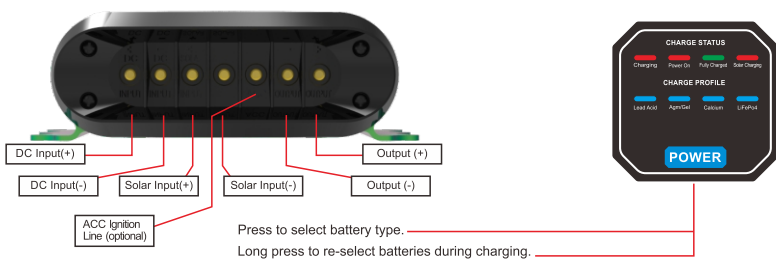


## INSTALLATION INSTRUCTIONS


- Please check whether the specification of your cable is compatible with this DC-DC charger.
- This charger can be installed both horizontally and vertically.
- Please make sure that the charger is installed as close as possible to the battery you are going to charge, and you also need to make sure that the area is not susceptible to moisture, water, dust or high temperatures.
- Please ensure that there is no heat source or flammable gas around the unit.
- Anderson plug is recommended when this charger is installed on a caravan or a campers (see picture below)
- Twin core cable will be used between the start battery and the charger, and you need to connect the common negative and common positive wires from the starter battery to the input of the DC-DC in the appropriate positive and negative terminals.
- It is highly recommended to install a 60 Amp circuit breaker (not included in this package) that should be installed near the starter battery.
- Check whether all connections are clean and tight.
- You can connect the optional ACC line to the ignition of your vehicle, then turn your key to the ACC position when engine starts, which will be detected by the DC-DC charger. And the main battery will start charging your auxiliary battery.

Note: The charging mode of the charger for the auxiliary battery is changed to solar panel charging if the ACC line is connected but you key is not turned to the START position.

### Suggested fitment to vehicle only

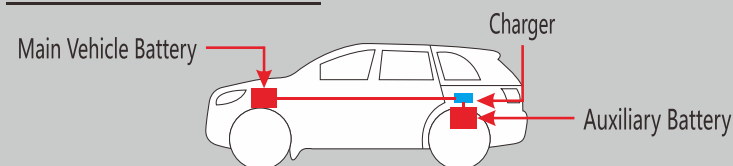

### Suggested fitment to vehicle with caravan

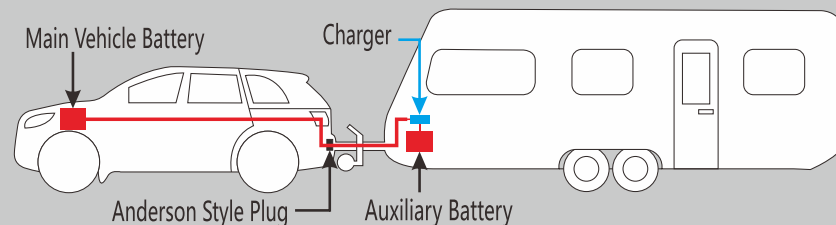

This charger can also be connected to the solar panel, see detailed wiring diagram at Page 5.

## HOW TO USE

### 1.DC Battery

- Start your vehicle and let it idle.
- And the charger will recognize that there is a charge being applied to the main starting battery.
- The charger will charge the auxiliary battery when the main starting battery has reached 13V.  
The main battery will start charging the auxiliary battery when its voltage is or above 12.8V (ACC line connected).
- Press "POWER" to re-select batteries (The default setting is for lead acid battery, and your setting will be saved once selection is made).
- The charger will continue to operate even after the vehicle has been switched off, however when the main starting battery falls below 12.5 volts the charger will automatically shut off. The main battery will start charging the auxiliary battery when its voltage is or above 12.8V (ACC line connected).

### 2. Solar Input


- When the input terminal is connected to the solar panel, the charging path is automatically identified through the ACC signal.
- Press "POWER" to select the corresponding battery type, and batteries can be re-selected during charging by long pressing the button.
- Charging begins when the output of solar panel reaches 16V~25V, when it exceeds 25V, enter the constant current charging mode.

## DEEP CYCLE BATTERY MAINTENANCE

- This DC-DC charger will be used to charge your auxiliary battery, for example, deep cycle batteries that are designed to provide power for your fridges and lights in a caravan or camper.
- It is known that the lifespan of a deep cycle battery can be extended if it is not discharged below 50% of its full capacity. A fully charged battery (50 amp) can deliver 50 amp/hours without shortening its lifespan.
- Your fridge might use approximately 24 amps per day. In this light, if your 100AH battery is only used to power your fridge while receiving no charge, and it would require charging after 48 hours.
- To replenish the capacity of the battery (80 amp hours), you may need to use a 40 amp DC-DC charger that would further require 5 hours of driving. A twenty amp unit will require at least 5 hours of driving to fully recharge the battery. Undercharge the battery or discharge it by more than 50% will significantly shorten its lifespan.

## BATTERY WIRING

This diagram is for a reference only. Local rules and regulations should be followed when installing this unit.

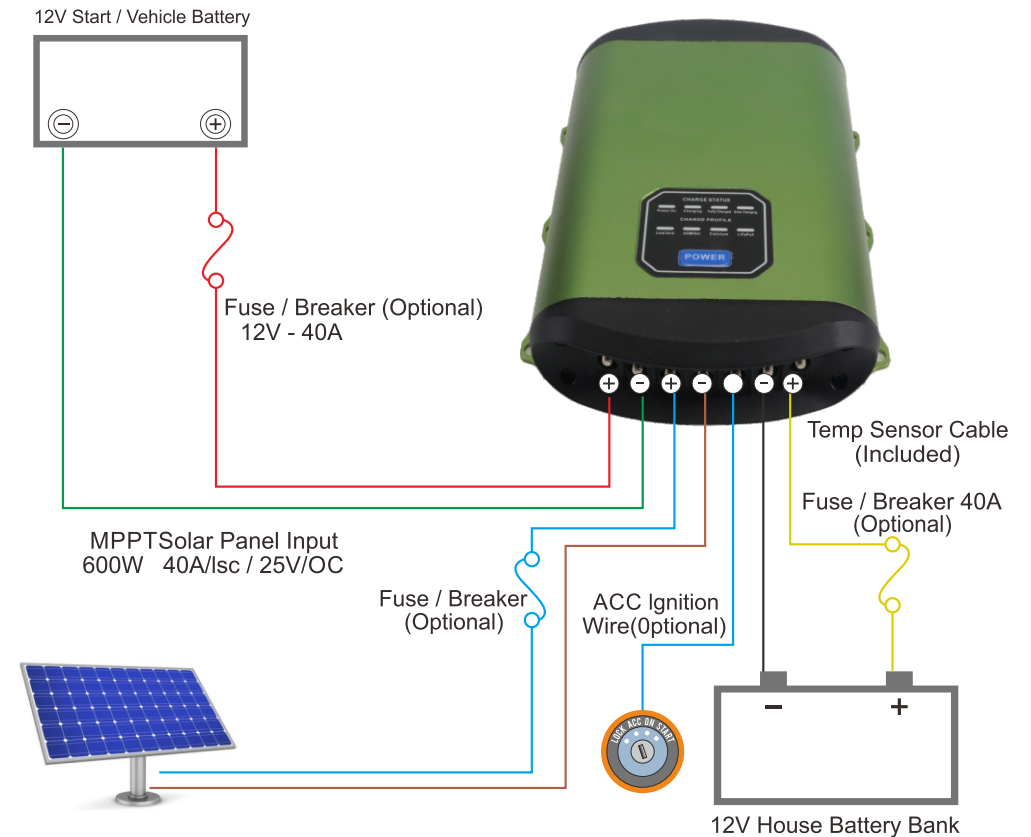

**NOTE:** First connect the ACC line to the ignition of your vehicle. Then turn your key to the ACC position when engine starts, which will be detected by the DC-DC charger. And your auxiliary battery will be charged via the main battery.

## TROUBLESHOOTING

- Display shows that the charger is not charging ; check where the battery is connected ; check the terminals; check whether the battery is 12V
- Battery is not charging: check whether all connections are connected correctly ; check the status of the battery; check the status of your vehicle or solar panel.
- Battery cannot be fully charged or power cannot be maintained: please check whether your battery has been used for over 3 years; overheat; low in electrolyte; over-charging or battery vulcanized; You need to consult your battery manufacturer to check its condition or make a replacement.


## TECHNICAL SPECIFICATIONS

Model:	XR-OT058	
Type	Multi Stage	
Input	DC Battery:12.5-16.0Volts;	Solar Input:16.0 - 25.0 Volts
Output / Charging Voltage	14.4 -15.4 Volts (Stops charging when alternator output or vehicle battery below 12.5 Volts)	
Output Current	DC Output:40A	Solar Output:40A
Minimum Start Voltage	6Volts - For battery being charged	
Charge Control		
Soft Start	YES	
Soft Charge Current	40A	
Bulk Charge Voltage	14.7V(AGM/Gel)14.4(Lead Acid)15.4(Calcium)14.4V(LiON)	
Absorption	Constant voltage with automatic amperage control	
Equalisation	Automatic	
Float Charge voltage	13.5(AGMGel)13.5V(Lead Acid)13.5V(Calcium)	
Float Charge Current	100mA	
Battery Range	120 to 1200Ah	
Cable Length /Twin Core		
0 - 1 Metres	10AWG	
1-5 Metres	6 AWG	
5 Metres+	4AWG	

## CHARGING VOLTAGE

	AGM/GEL	LEAD ACID	CALCIUM	LiON
BOOST	14.3V	14.0V	15.0V	14.0V
CHARGING	14.7V	14.4V	15.4V	14.4V
MAINTENANCE	13.5V	13.5V	13.5V	

## CHARGING ALGORITHM

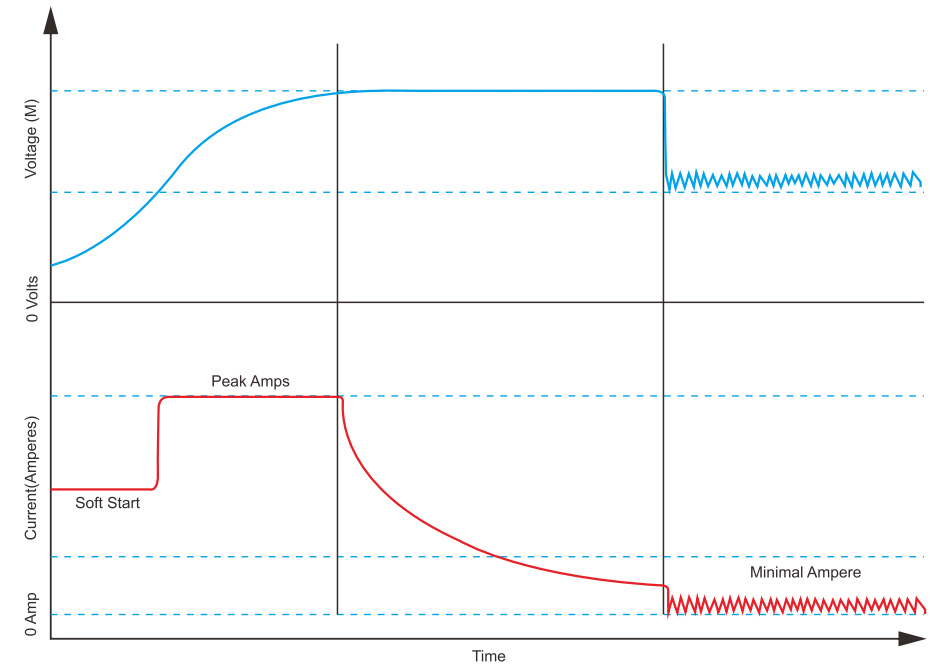

Charging algorithm will change according to battery type.

**NOTE:** Charging voltage is specified by your battery manufacturer. Non observance of instructions will void the warranty of your battery.

# WARRANTY



## WARRANTY PERIOD:

Full 12 months warranty from date of purchase against all manufacturing defects. This DC-DC charger comes with guarantees that cannot be excluded under the Australian Consumer Law.

## WHAT DOES THE WARRANTY COVER?

Under normal usage conditions, this warranty covers:

1. Any defect in design or manufacture which results in its failure to perform correctly as described.
2. We will either repair or replace the product at our discretion provide that the fault is found to have been caused by a design or manufacturing defect and not misuse or tampering.
3. The limited warranty is the only one that applies to this unit, and it sets forth all the responsibilities.

## THE WARRANTY DOES NOT COVER:

1. Cost of removing and reinstalling the product.
2. Travel and/or other expenses due to customer's location
3. Transport charges and damage in transit. It is your responsibility to deliver and pick up your product, including any costs associated with the postage of repairing or replacing your product. If you want to send the product back we recommend that you insure against loss or damage.
4. Any loss directly or indirectly associated with the product that fails to operate.
5. Damage caused by mould, misuse, incorrect operation, adverse weather, accidents and daily wear and tear.
6. The warranty does not extend to subsequent purchasers or users other than OEM applications.
7. This unit is not intended for commercial use. This warranty does not apply to damage to units from misuse or incorrect installation/connection. Misuse includes wiring or connecting to improper polarity power sources.