

## Output current adjustment method:

1. Adjust the CV potentiometer to set the output voltage to the voltage value you need according to your load requirements.

2. Set the CC potentiometer counterclockwise for about 30 turns (i.e. set the output current to the minimum, connect the LED, and adjust the CC

Potentiometer to the current you need. For battery charging, discharge the battery and then connect it to the output.

CC to the current you need. (When charging, you must use a fully discharged battery to adjust the current, because the battery has

The more power there is, the smaller the charging current.

## Features:

1. 6-40V wide voltage input

2. Synchronous rectification 97% high efficiency

3. Constant voltage and constant current output is continuously adjustable

- 4. Two 85V 80A high current MOS tubes
- 5. Use 23M Sendust aluminum and 3 0.8MM pure copper wires to wind

## Product Image:

